


GEN 4: MASS FLOW VIBRATION CALIBRATION


1 Select 'Menu' at the bottom right-hand corner.




2 Select 'Machine Settings', then 'Calibrations & Procedures'.

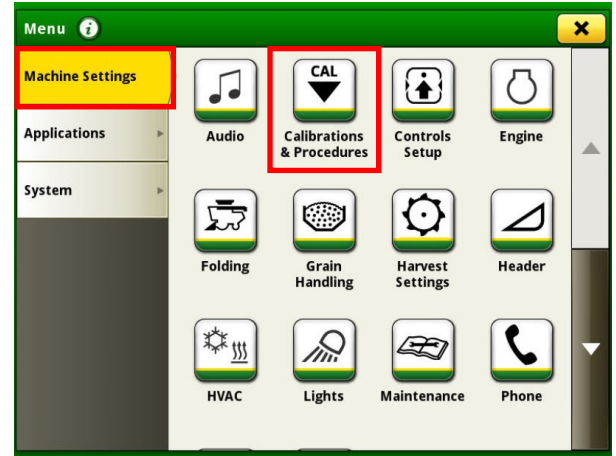


3 Select 'Harvest', then 'Mass Flow Vibration Calibration'.

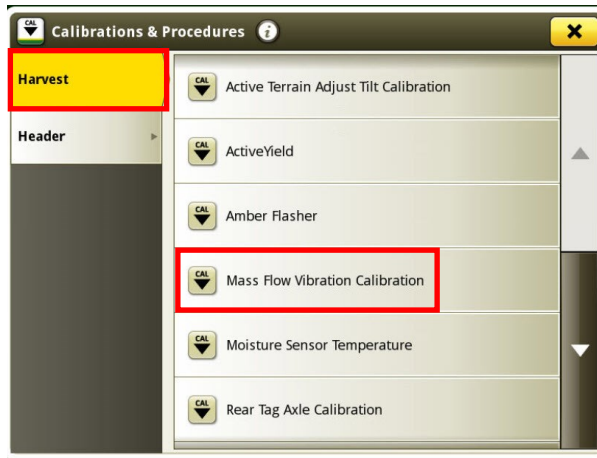

4 Select 'Calibrate'.

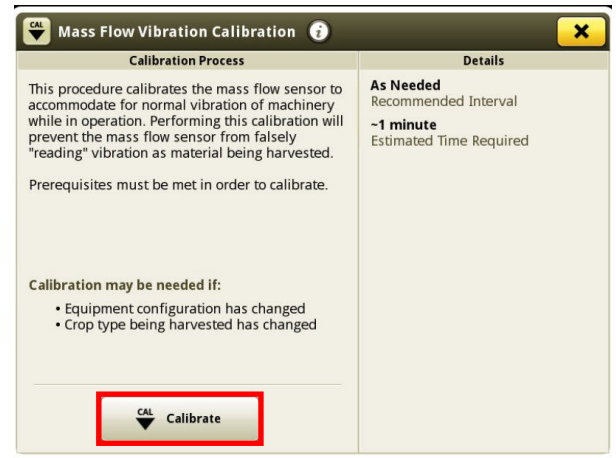

5 Once you have met all criteria, select 'Next'.

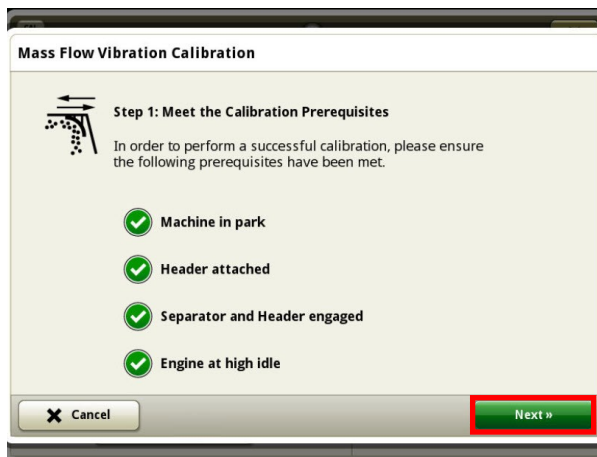

6 Select 'Save'.

