


Setting and Understanding Margin Set Point

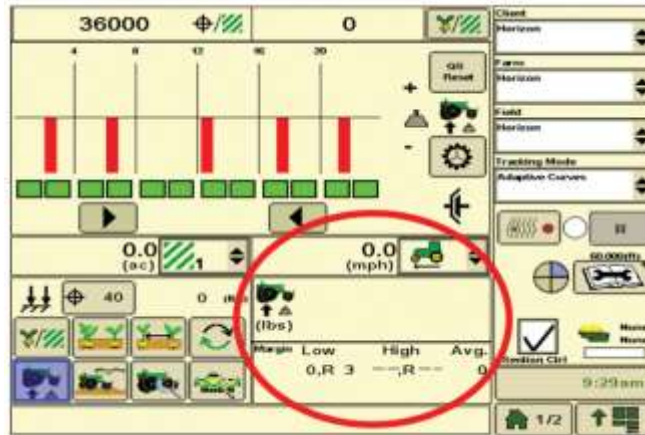

Set down force to a setting you have used in the past, making sure that you achieved consistent seed depth and adequate down force. Plant a strip to achieve set down force. Note the high, low, and average margin value using the down force icon in the details section.

Use average margin as target margin value. Adjust down force as needed. Target margin level setting must be entered **BASED ON THE OPERATOR'S JUDGMENT OF PLANTING CONDITIONS.**